

ENJOY THE RIDE...

**Dobinsons**  
SPRING & SUSPENSION

... RIDE TO ENJOY

**MAKE:** LANDROVER **TYPE:**


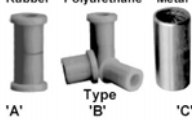

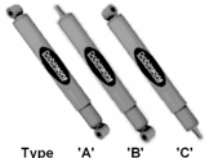

**MODEL:** Series II, IIA, III **YEAR:** 1958 – 1984




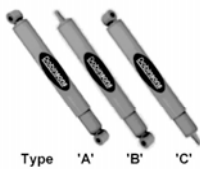
**DETAIL:** L.W.B. Pickup & Station Wagon, Santana 109

S.W.B. Santana 88

LAND-51



FRONT		TYPE	QTY	PART NUMBER
 <b>LEAF SPRING</b> Type 'A' 9 Leaves Raised Height (40mm Lift)		A	1	LAND-9L-F RH
		A	1	LAND-9L-F LH
 <b>SHACKLE BUSHES</b> Rubber Polyurethane Metal Type 'A' Type 'B' Type 'C' S.W.B. Series II, IIA, III L.W.B. Series II, IIA Kit Contains: 4 x SPF2154 2 x SPF212		B	1	PB51-1029K
1973 on, Series III, L.W.B. Only Kit Contains: 4 x SPF2154 2 x SPF2155		B	1	PB51-1081K
 <b>U-BOLT KIT</b> Type 'A' 'B' 'D' Series II, IIA Right Hand Side Kit Contains: 1 x UB51-601-1 1 x UB51-901		A	1	UB51-901K
Left Hand Side Kit Contains: 2 x UB51-601-1		A	1	UB51-601-1K
Series III Right Hand Side Kit Contains: 2 x UB51-903		D	1	UB51-903K
Left Hand Side Kit Contains: 1 x UB51-902 1 x UB51-903		A	1	UB51-902K
 <b>SHOCK ABSORBER</b> Heavy Duty Gas Type 'A' 'B' 'C'		A	2	GS51-090
 <b>STEERING DAMPER</b> Type 'A' Heavy Duty, (Big Body) Complete with Fittings		A	1	SD51-811

REAR		TYPE	QTY	PART NUMBER
 <b>LEAF SPRING</b> Type 'A' Suits S.W.B. 11 Leaves Raised Height (45mm Lift)		A	1	LAND-SWB-R RH
		A	1	LAND-SWB-R LH
Suits L.W.B. 8 Leaves Raised Height (45mm Lift)		A	1	LAND-8L-R RH
		A	1	LAND-8L-R LH
 <b>SHACKLE BUSHES</b> Rubber Polyurethane Metal Type 'A' Type 'B' Type 'C' Kit Contains: 6 x SPF2154		B	1	PB61-1030K
 <b>U-BOLT KIT</b> Type 'A' 'B' 'C' Series II, IIA Kit Contains: 2 x UB51-601-1		A	2	UB51-601-1K
Series III Kit Contains: 2 x UB51-904		A	2	UB51-904K
 <b>SHOCK ABSORBER</b> Type 'A' 'B' 'C' Suits S.W.B. (L.W.B. Pre 1958) Heavy Duty Gas		A	2	GS51-015C
Suits L.W.B. (1958 on) Heavy Duty Gas		C	2	GS51-117