

ENJOY THE RIDE...

**Dobinsons**  
SPRING & SUSPENSION



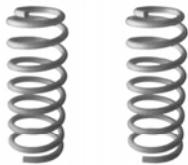
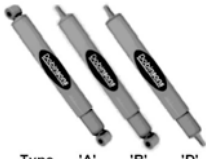


... RIDE TO ENJOY



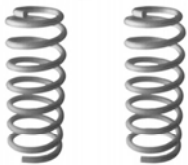


**MAKE:** LANDROVER **TYPE:** Defender

**MODEL:** 90 Series **YEAR:** 1984 on

**DETAIL:** S.W.B. 2.5L 4 cyl, 2.5L 6 cyl TD5  
2.0L TDi, 3.0L TDi **LAND-54**



 FRONT 	TYPE	QTY	PART NUMBER
<p><b>COIL SPRING</b> Type 'C'</p>  <p><b>Petrol</b></p> <p>Linear Rate Raised Height (40mm Lift)</p> <p>1 <b>C51-014</b> (Pair)</p> <p>Linear Rate Raised Height (45mm Lift) 50-80Kg Accessories</p> <p>1 <b>C51-018</b> (Pair)</p> <p><b>Diesel</b></p> <p>Linear Rate Raised Height (45mm Lift) 80Kg Accessories</p> <p>1 <b>C51-018</b> (Pair)</p>			
<p><b>SHOCK ABSORBER</b></p>  <p>Type 'A' 'B' 'D'</p> <p>Heavy Duty Gas</p> <p>D 2 <b>GS51-116</b></p>			
<p><b>STEERING DAMPER</b> Type 'A'</p>  <p>Heavy Duty (Big Body) Complete with Fittings</p> <p>A 1 <b>SD51-832</b></p>			
<p><b>UNDER BODY BUSH KIT</b></p>  <p>Polyurethane Bush</p> <p><b>NOTE:</b> See Rear Under Body Bush Kit</p>			
<p><b>CASTOR KIT</b></p> <p>Front Leading Arm Castor Kit (<math>\pm 2^\circ</math>)</p> <p>Kit Contains: 4 x Eccentric Polyurethane Bushes</p> <p>(Suit 38mm wide Leading Arm)</p> <p>- 1 <b>PB51-501K</b></p> <p>Raising vehicle will affect castor angle. A wheel alignment is recommended to determine if a castor kit is required.</p>			

 REAR 	TYPE	QTY	PART NUMBER
<p><b>COIL SPRING</b> Type 'C'</p>  <p>Linear Rate Raised Height (45mm Lift)</p> <p>1 <b>C51-015</b> (Pair)</p> <p>Linear Rate Raised Height (50mm Lift) 220Kg to GVM</p> <p>1 <b>C51-027V</b> (Pair)</p>			
<p><b>SHOCK ABSORBER</b></p>  <p>Type 'A' 'B' 'C'</p> <p>Heavy Duty Gas</p> <p>C 2 <b>GS51-117</b></p>			
<p><b>UNDER BODY BUSH KIT</b></p>  <p>Polyurethane Bush</p> <p><b>NOTE:</b> Kit Includes Front &amp; Rear Under Body Bushes</p> <p><b>Chassis Number up to LA930455</b></p> <p>2 x Front Panhard Rod Bush 4 x Front Radius Arm to Diff Bush 4 x Front Radius Arm to Chassis Bush 2 x Rear Upper Arm to Chassis Bush 2 x Rear Lower Arm to Diff Bush 4 x Rear Lower Arm to Chassis Bush</p> <p>- 1 <b>PB51-1244K</b></p> <p><b>Chassis Number LA930456 on</b></p> <p>2 x Front Panhard Rod Bush 4 x Front Radius Arm to Diff Bush 4 x Front Radius Arm to Chassis Bush 2 x Rear Upper Arm to Chassis Bush 2 x Rear Lower Arm to Diff Bush 4 x Rear Lower Arm to Chassis Bush</p> <p>- 1 <b>PB51-1243K</b></p>			