



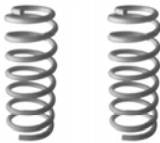
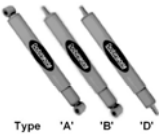

MAKE: LANDROVER **TYPE:** Defender



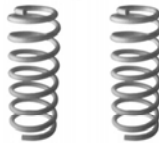
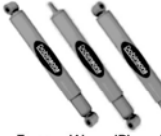
MODEL: 110, 130 Series **YEAR:**

DETAIL: 100mm (4") Lift

LAND-60



 FRONT 	TYPE	QTY	PART NUMBER
<p>COIL SPRING Type 'C'</p>  <p>O NOTE: See warning below</p> <p>Linear Rate Raised Height 100mm Lift</p>		1	C51-054 (Pair)
<p>SHOCK ABSORBER</p>  <p>Type 'A' 'B' 'D'</p> <p>Heavy Duty Gas</p>	D	2	GS59-683
<p>Adjustable Panhard Rods</p>  <p>Complete with Bushes</p>		1	PR51-1406
<p>Wheel Alignment Products</p> <p>Front Radius Arm Castor Kit ($\pm 3^\circ$)</p> <p>Suits models with 44mm Wide Leading Arms</p> <p>Raising vehicle will affect castor angle. A wheel alignment is recommended to determine if a castor kit is required.</p> <p>Note: Refer Warning on Rear</p>	-	1	WA-507K

 REAR 	TYPE	QTY	PART NUMBER
<p>COIL SPRING Type 'C'</p>  <p>O NOTE: See warning below</p> <p>Linear Rate Raised Height 100mm Lift</p>		1	C51-055 (Pair)
<p>SHOCK ABSORBER</p>  <p>Type 'A' 'B' 'C'</p> <p>Heavy Duty Gas</p>	C	2	GS45-125
<p>WARNING:</p> <p>The 100mm lift Suspension Ki is for off-road use only. The following extensive modifications need to be made to the vehicle before the kit is fitted.</p> <ol style="list-style-type: none"> 1. Adjustable Panhard Rods 2. Modified Leading / Trailing Arms 3. Brake Hoses 4. Extended Bump Stops 5. Gear Box & Drive Line Modifications 6. Steering Arms <p>Note: No warranty or Guarantee on Products To suit 4" lift and higher</p>			