

**MAKE:** TOYOTA

**TYPE:** Landcruiser 70 Series




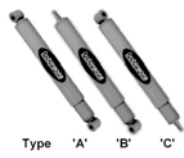



**MODEL:** HZJ70, HZJ73,  
PZJ70, PZJ73




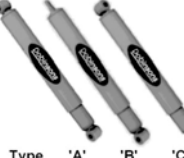


**YEAR:** 1990 on

**DETAIL:** Mid Wheel Base

TOY-66



FRONT		TYPE	QTY	PART NUMBER
 <b>LEAF SPRING</b> Type 'A'				
7 Leaves Raised Height (45mm Lift)		A	2	<b>HZJ75-7L-F</b>
8 Leaves Raised Height (45mm Lift) 60-100Kg Accessories		A	2	<b>HZJ75-8L-F</b>
 <b>SHACKLE BUSH KIT</b> Kit Contains: 12 x SPF2260		B	1	<b>PB59-1019K</b>
 <b>U-BOLT KIT</b> Kit Contains: 2 x UB59-436		B	2	<b>UB59-436K</b>
 <b>SHOCK ABSORBER</b> Heavy Duty Gas		B	2	<b>GS59-637</b>
 <b>STEERING DAMPER</b> Type 'A'				
Heavy Duty (Big Body) Complete with Fittings		A	1	<b>SD59-824</b>
 <b>SHACKLE KIT</b> Greasable: Fit in Pairs		A	2	<b>SK59-018</b>
Can be substitute by: Right Hand Side (Anti-Reverse) Left Hand Side (Anti-Reverse)		D	1	<b>SK59-047</b>
		D	1	<b>SK59-048</b>
 <b>PIN KIT</b> Greasable: Fit in Pairs		C	2	<b>SP59-007</b>

REAR		TYPE	QTY	PART NUMBER
 <b>LEAF SPRING</b> Type 'A'				
7 Leaves – Plus 1 Spacer Leaf Raised Height (50mm Lift)		A	1	<b>HJ60-7L-R RH</b>
		A	1	<b>HJ60-7L-R LH</b>
7 Leaves – Plus 1 Spacer Leaf Raised Height (50mm Lift) 150Kg to GVM		A	1	<b>HJ61-7L-R RH</b>
		A	1	<b>HJ61-7L-R LH</b>
 <b>SHACKLE BUSH KIT</b> Kit Contains: 12 x SPF2260		B	1	<b>PB59-1019K</b>
 <b>U-BOLT KIT</b> Kit Contains: 2 x UB59-453-3		A	2	<b>UB59-453-3K</b>
 <b>SHOCK ABSORBER</b> Heavy Duty Gas		A	2	<b>GS59-650</b>
Heavy Duty Gas (Big Bore)		A	2	<b>GS59-651</b>
 <b>SHACKLE KIT</b> Greasable: Fit in Pairs		A	2	<b>SK59-019</b>
Can be substitute by: Right Hand Side (Anti-Reverse) Left Hand Side (Anti-Reverse)		D	1	<b>SK59-047</b>
		D	1	<b>SK59-048</b>
 <b>PIN KIT</b> Greasable: Fit in Pairs		C	2	<b>SP59-023</b>