

ENJOY THE RIDE...

Dobinsons
SPRING & SUSPENSION

... RIDE TO ENJOY

MAKE: TOYOTA

TYPE: Landcruiser

MODEL: FZJ/HZJ/HDJ
80/105





YEAR: 05/1990 on





DETAIL: Station Wagon

100 (4" Lift)/150mm (6" Lift)

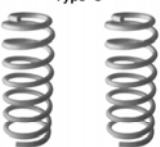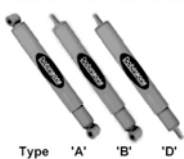TOY-88

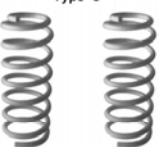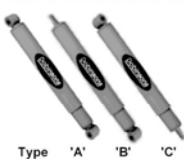

FRONT		TYPE	QTY	PART NUMBER
 COIL SPRING Type 'C' NOTE: See warning below Linear Rate Raised Height (100mm Lift) Linear Rate Extra Heavy Duty Raised Height (100mm Lift) Linear Rate Raised Height (150mm Lift)			1	C59-170 (Pair)
			1	C59-308 (Pair)
			1	C59-310 (Pair)
 SHOCK ABSORBER Type 'A' 'B' 'D' Long Travel Heavy Duty Gas		D	2	GS59-684
 STEERING DAMPER Type 'A' Heavy Duty (Big Body) Complete with Fittings		A	1	SD59-824
Adjustable Panhard Rods  RH Drive Complete with Bushes LH Drive Complete with Bushes			1	PR59-1404
			1	PR59-1408
100mm (4" Lift) CASTOR KIT Front Radius Arm Castor Kit (±3°) 4 x Polyurethane Bushes 4 x Eccentric Bushes (+1 Grease Tube) Raising vehicle will affect castor angle. A wheel alignment is recommended to determine if a castor kit is required.				
			-	PB59-503K

REAR		TYPE	QTY	PART NUMBER
 COIL SPRING Type 'C' NOTE: See warning below Linear Rate Raised Height (100mm Lift) Linear Rate Extra Heavy Duty Raised Height (100mm Lift) Linear Rate Raised Height (150mm Lift) No Accessories Linear Rate Extra Heavy Duty Raised Height (150mm Lift) 400kg Accessories			1	C59-171 (Pair)
			1	C59-309 (Pair)
			1	C59-317 (Pair)
			1	C59-311 (Pair)
 SHOCK ABSORBER Type 'A' 'B' 'C' Long Travel Heavy Duty Gas		B	2	GS59-685
UNDER BODY BUSH KIT  Polyurethane Bush NOTE: Kit Contains Rear Under Body Bushes 4 x Front Leading Arm Bush 2 x Front Radius Arm to Chassis Mount 2 x Front Panhard Rod Bush 2 x Rear Panhard Rod Bush 4 x Rear Upper Trailing Arm Bush 4 x Rear Lower Trailing Arm Bus				
			-	PB59-1258K
Adjustable Panhard Rods  Complete with Bushes				
			1	PR59-1405
WARNING: 100mm / 150mm Lift The Suspension Components listed on this page are for off-road use only. The following extensive modifications need to be made to the vehicle before the kit is fitted. 1. Adjustable Panhard Rods 2. Modified Leading / Trailing Arms 3. Brake Hoses 4. Extended Bump Stops 5. Gear Box & Drive Line Modifications 6. Steering Arms Note: <i>Dobinsons Spring & Suspension do not accept any responsibility for injury caused to person or property through the use of the products listed on this page. These products do not come with any warranty or guarantee</i>				